



1. Remove Fuel Cap



2. Remove 2 right side screws on drivers side tail light.



3. Push tail light to the right and remove. Harness should be long enough to rest light housing on top of bumper. If not, take care not to damage wires if leaving it hang by harness.



4. Inside opening for tail light are plastic tabs/clips to push in to remove OE fuel retainer. While reaching around outside and gently pulling outward on retainer press in clip to allow to free. The 2 clips towards the rear are easy to reach. Pull back half of retainer outwards from body and work around a bit till 2 clips on front side let loose. It may be necessary to reach around front side and compress clips if it won't come loose but this is very difficult to access.



5. Notice small hole on front side of large hole in body where OE retainer ring covered. There is a small pin on the Drake Off Road fuel door that will need to line up with that hole.