



RockJock® Professional OffRoad Products presents:
CE-9029E E-Z Tire Deflator
 Operation Instructions



1) Thread valve stem adapter onto valve stem clockwise, all the way down snug.




2) Remove valve stem core. Push in valve core remover and turn counter clockwise.



3) When valve core is all the way out, the air pressure will push the valve core remover out and the gauge will read the tire pressure.



4) Pull out the slide valve to release air. Push in on slide valve to stop air and check pressure.

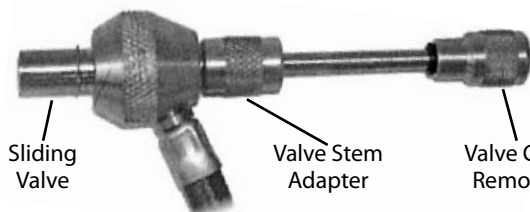

5) When desired air pressure is achieved, leave slide valve pushed in and push valve core remover in and turn clockwise to reinstall valve core.



6) Turn valve core until snug.



7) Remove the valve stem adapter by turning it counter clockwise.



Currie Enterprises / RockJock Professional Off Road Products
 382 N. Smith St., Corona, Ca. 92880
 Ph (714) 528-6957 - F (951) 549-0267
www.rockjock4x4.com

