



CFE PRODUCTS



JK CUSTOM HEAVY DUTY LIGHT MOUNT

MODEL #JK- LMB2

Jeep Wrangler JK / 2007 & UP



Page 1

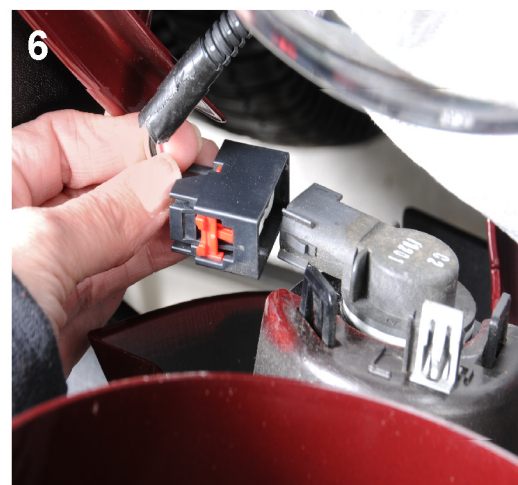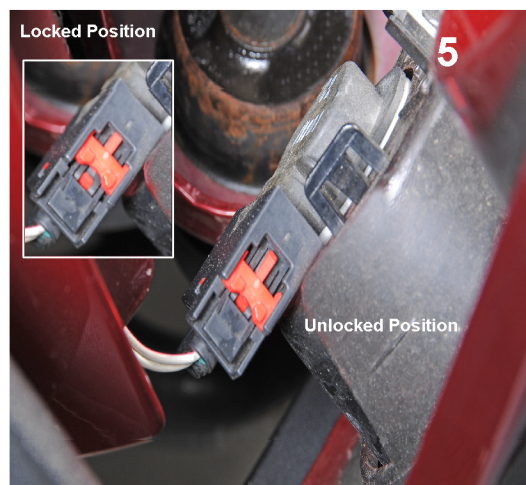

1. Remove the Push Clips that are holding the Grill on (6 locations) using a small flat edge screw driver as shown in picture 1 & 2 & 3.

2. Pull the Grill forward then pull out the bottom of the Grill to unsnap the bottom clips as shown in picture 4. ****DO NOT PULL GRILL ALL THE WAY OFF YET...the Parking Light Wires on each end still need to be unplugged. (next step)**

3. Slide back the Red Plug Lock Tab to the **Unlock Position** as shown in picture 5 and disconnect the cable from the Parking Light on each side as shown in picture 6.

6. Remove Grill and set aside.

4. Pay close attention and check to see if the BRAKE LINE runs behind your grill as shown in picture 7. This only affects earlier JK's. If your brake line is in this location, make sure that you don't pinch the line during installation.







CFE PRODUCTS

MODEL #JK- LMB2

Jeep Wrangler JK / 2007 & UP



Page 2

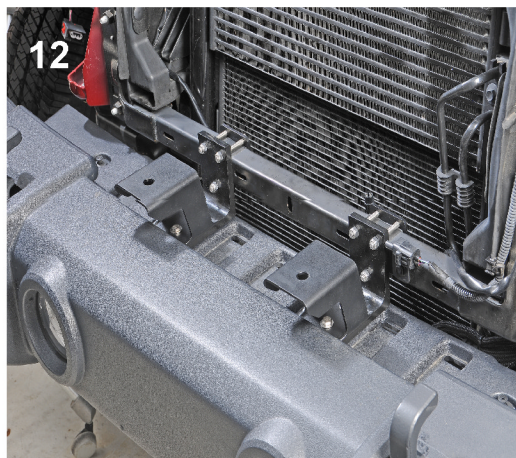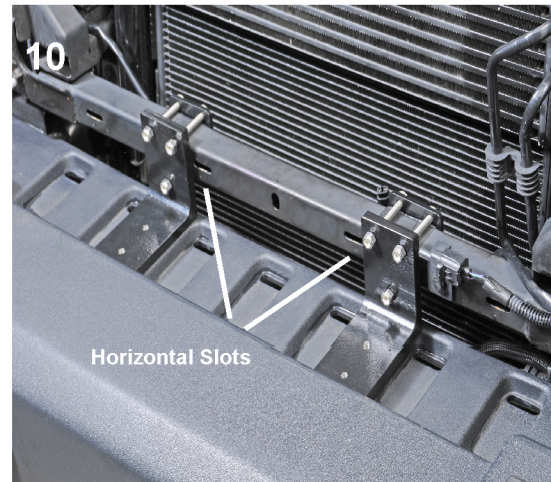

5. Attach the Backing Plate to the Mount using carriage bolts and lock nuts as shown in picture 8. The double holes go toward the top. This will allow you to slip the Mount over the Lower Grill Frame and then install the bottom bolt (loosely install the nuts before tightening.) Position the Mounts on the Lower Grill Frame making sure not to block the two horizontal slots shown in picture 10. These slots are used for remounting the grill. Tighten with a 7/16" Open End Wrench.

6. Attach the 2 Tubular Light Mounts to the Mounting Brackets using the 1/4-20 hex head bolts and flat washers supplied in the kit as shown in pictures 11 & 12.

7. Reinstall the grill as shown in picture 13.

8. Congratulations, you are now ready to install your lights. Picture 14 shows a set of 8" IPF Lights mounted on a 2012 JK.

