




INSTALLATION INSTRUCTIONS

Product: Control Arm Correction Brackets
Part Number: JKS6200

Applications: Jeep Wrangler JK, 2007-14

517-278-1226 • tech@jksmfg.com • www.jksmfg.com
491 W. Garfield Avenue, Coldwater, MI 49036

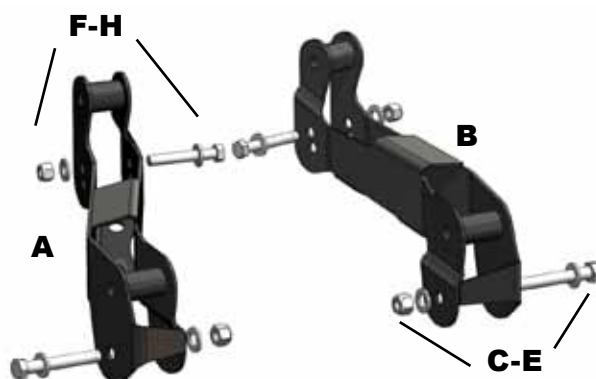

Welcome

Thank you for purchasing Control Arm Correction Brackets from JKS Manufacturing. We are committed to providing you with the best products available and your satisfaction is our first priority.

PLEASE READ these Installation Instructions carefully, and save them for future reference, as they contain important installation and maintenance information.

Important

Intended for installation on vehicles already lifted a minimum of 2". Vehicle must be equipped with a minimum of 2" of additional bump stop (JKS1120).

Tools Required

- Metric Socket Wrench Set
- Torque Wrench

Parts


	Description	QTY
A	Control Arm Correction Bracket - Drv	1
B	Control Arm Correction Bracket - Pass	1
	Bolt Pack J109	1
C	14mm x 100mm bolt	2
D	14mm flat washer	4
E	14mm lock nut	2
F	12mm x 80mm bolt	2
G	12mm flat washer	4
H	12mm lock nut	2

Installation

INSTALLATION OF THESE BRACKETS IS BEST PERFORMED WITH THE VEHICLE ON THE GROUND TO LIMIT AXLE MOVEMENT WHEN DISCONNECTING THE CONTROL ARMS.


1. INSTALLATION

- Park the vehicle on a clean, flat surface and block the wheels for safety.
- Working on one side at a time, remove the upper and lower control arm mounting bolts at the frame. Loosen the bolts at the axle, but do not remove.
- Install the control arm drop brackets at shown using the factory hardware. Torque lower bolt to 125 ft-lbs. Torque upper bolt to 75 ft-lbs.

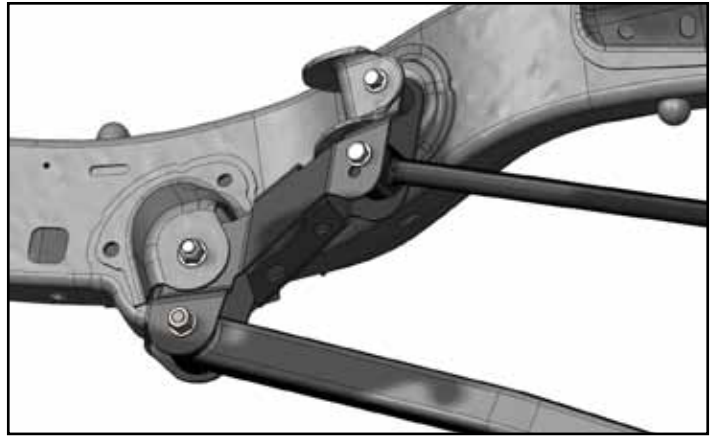

Note: *It may be easier to align the control arms to the mount by removing the opposite side upper control arm and adjusting the axle with a hydraulic jack.*

- Repeat installation on other side of the vehicle.
- Torque the lower control arm bolts to 125 ft-lbs.
- Torque the upper control arm to bracket and to axle bolts to 75 ft-lbs.

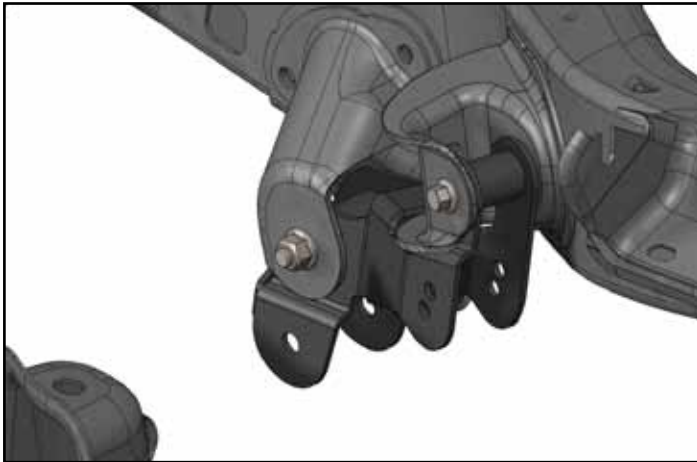

- Mount the lower control arm to the drop bracket using the provided 14mm hardware. Install the bolt from the outside in.
- Mount the upper control arm with the provided 12mm hardware. Install the bolt from the inside out. Use the upper hole for 2"-3.5" lifts and the lower hole for 4"+ lifts.

Maintenance

Check hardware torque after 500 miles.

©2014 JKS Manufacturing, Inc & Aftermarketing, LLC
Revision Date 08/14/2014