

# Installation Instructions Door Surround Kit


**Vehicle Application:** 


•Jeep Wrangler Unlimited

2007 – Current Part Number: 55011

Compatible with 56823 Trektop NX, 52584 Safari Bikini and 90031 Duster

www.Bestop.com - We're here to help! Visit our web site and click on "Ask a Question". Click here for more Jeep® Accessories by Bestop.



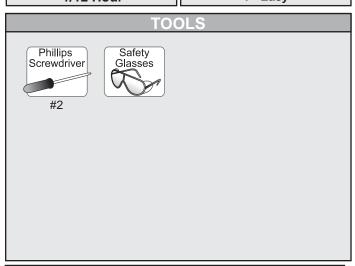



**A** CAUTION

Safety glasses should be worn at all times while installing this product.

WARNING
This product is designed primarily to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate the vehicle in excess of manufacturer's specifications.

#### **WEAR SEAT BELTS AT ALL TIMES**


Read and follow, precisely, all installation instructions provided when installing product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

### **Door Surround Kit Installation Instructions**

#### Parts List and Hardware Identification Front Door Rail - Right... ☐ Rear Door Rail - Left... Qty - 1, Part Number 479.86 Qty - 1, Part Number 479.89 Rear Door Rail - Right., Front Door Rail - Left.. Qty - 1, Part Number 479.88 Qty - 1, Part Number 479.87 Tailgate Bar, Qty - 1, M8 x 75mm Knob. Part Number 489.46 Qty - 4, Part Number 478.90 M8 x 30mm Knob, Qty - 2, Part Number 480.22 Rear Top Arch, Qty - 1, Tailgate Bar Mount-Right, Part Number 483.27 Qty - 1, Part Number 488.46 Tailgate Bar Mount-Left, Qty - 1, Part Number 488.47 Front Top Arch, Qty - 1, Part Number 483.24 ☐ M5 x 16 Screw, Qty - 4, Part Number 459.45 M5 Lock Nut, Qty - 4, Cable Guide Bracket -Cable Guide Bracket -Part Number 308.62 Right, Qty - 1, Part Left, Qty - 1, Part Number 482.82 Number 482.83

# Mount Cable Guide Brackets to Rear Door Rails


Mount the Right Cable Guide Bracket to the Right Rear Door Rail with two (2) M5 x 16 Screws and M5 Lock Nuts. Repeat with the Left Rear Door Rail.

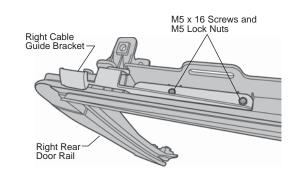

## 2 Install Rear Door Rail

Locate the left and right Rear Door Rail. Insert the pin in the bottom of the Door Rail into the hole in the belt rail behind the door.

Place an M8 x 75mm Knob through the tab on the Door Rail and tighten.

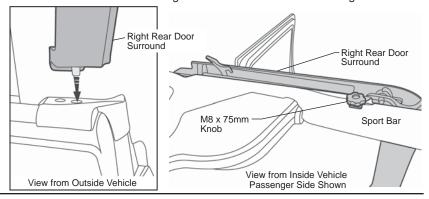



Rev. B 0612 55011 pg. 2

### **Door Surround Kit Installation Instructions**

# 3 Install Front Door Rail


Place the Front Door Rail above the door opening.

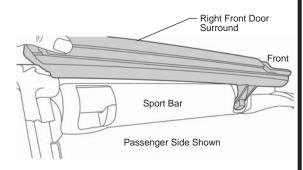

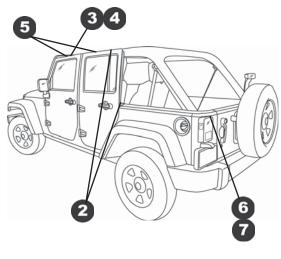


### 6 Install Tailgate Bar Mounts

Locate the left and right Tailgate Bar Mounts. Orient them on the vehicle. Hook the bottom of one mount under the belt rail and roll it toward the inside of the vehicle until it clips into place. Repeat this with the other Tailgate Bar Mount.

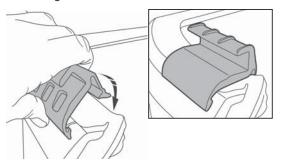


# 4 Install Knobs

Install an M8 x 75mm Knob at the front of the rail and an M8 x 30mm Knob in the center.

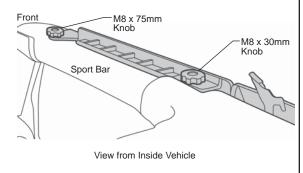


## 5 Install Top Arches

Insert one end of the Front Top Arch in to the slot in the middle of one of the Front Door Rails. Push the other end inward to flex the bow and insert it into the slot on the other side of the vehicle.

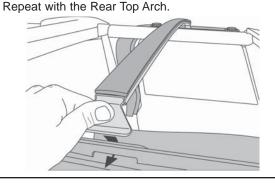

### Secure Tailgate Bar

Slide the Tailgate Bar into the Tailgate Bar Mounts on each side of the tailgate opening.

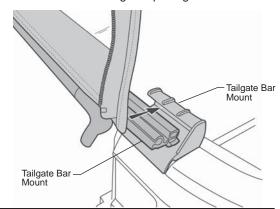

Rev. B 0612 55011 pg. 3

### **Door Surround Kit Installation Instructions**

#### LIMITED WARRANTY

We warrant our product to be free from defects in material and workmanship, for the terms specified below, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair or replacement of any item or items found by the factory to be defective within the time period specified. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS FOR REPLACE-A-TOP™, SAILCLOTH REPLACE-A-TOP™, SUPERTOP®, SUPERTOP® REPLACEMENT SKINS, SUNRIDER®, AND TIGERTOP®: TWO YEARS FROM DATE OF PURCHASE.

THE WARRANTY TIME PERIOD IS AS FOLLOWS FOR ALL OTHER "SOFT GOODS" MANUFACTURED BY OUR COMPANY (USING PRIMARILY VINYLS, PLASTICS, AND/OR FOAM): ONE YEAR FROM DATE OF PURCHASE.

THE WARRANTY TIME PERIOD IS AS FOLLOWS FOR ALL OTHER "HARD GOODS" MANUFACTURED BY OUR COMPANY (USING PRIMARILY METALS, PLASTICS, AND/OR FIBERGLASS): ONE YEAR FROM DATE OF PURCHASE.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



For further information or request for warranty work, please contact: Bestop Inc., Customer Service

Toll-Free: (800) 845-3567 Main: (303) 465-1755 E-mail: csbestop@Bestop.com Website: www.Bestop.com

Rev. B 0612 55011 pg. 4