



2007 Jeep® JK Wrangler H/D Taillight Guards Kit

11226.02 (Black)

11103.03 (Stainless Steel)



Components:

- (1) Driver's side rear guard
- (1) Passenger's side rear guard
- (8) Black plastic taillight lens spacer
- (4) Small 2" Philips head screw
- (4) Large 2" Philips head screw

Installation Instructions:

Step1: Select Driver's or passenger side lens. Instructions will be the same. Remove original screws (Fig.1). With the screws removed be careful not to change the position of the taillight assemble. Note the size difference of the two screws. The large size goes to the outside of the lens (Fig.2).



Fig.1

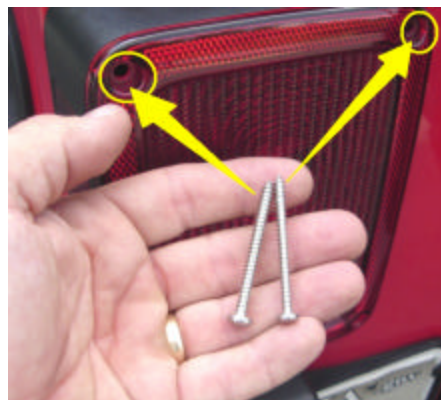


Fig.2



Step2: Insert the Large 2" replacement screw through the front side of the new H/D taillight guard starting with the outer top mounting hole. Place one of the Black Plastic Lens Spacer over the large 2" screw from the back side of guard (Fig.3). Insert screw and assemble into outer top hole (Fig.4).



Fig.3



Fig.4

Step3: Start outer top screw but do not tighten. Leave loose to allow for the fitment of the remaining 3 screws and spacers. Move to the inner top screw location and insert a Black Plastic Lens Spacer behind guard and into lens mounting opening (Fig.5). Insert Smaller 2" Philips Head Screw through the front of the guard and into the lens assemble (DO NOT TIGHTEN). Follow the same procedure for the outer lower and inner lower mounts. Remember that the larger 2" Philips head screws go to the outside. Confirm fitment of cover and proper placement of Black Plastic Spacers prior to tightening (Fig.6).



Fig.5



Fig.6



Step4: With all screws and spacers properly position, proceed to tighten screws. **DO NOT OVER TIGHTEN**, it is possible to crack the factory lens if Excessive force is used during the installation and the tightening of the Replacement screws (**Take Your Time**) (Fig.7).

Step5: Repeat steps 1-4 for opposite side (Fig.8).



Fig.7



Fig.8

LIMITED 90 DAY WARRANTY
Applies to Rugged Ridge by Omix-ada Inc. Products

Rugged Ridge Off Road (the Company) warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 DAYS from the date of original purchase, such defect(s) will be repaired or replaced or credited at the Company's sole option.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. Dated bill of sale), specification of defect(s) to the place of purchase or, with prior approval from the Company (Return Authorization Number is required), freight pre-paid to the Company address listed below.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or by acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN THE PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE.

IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Omix-ada Inc.
460 Horizon Dr. Suite 400
Suwanee, Georgia 30024